


CRCN Model spare parts

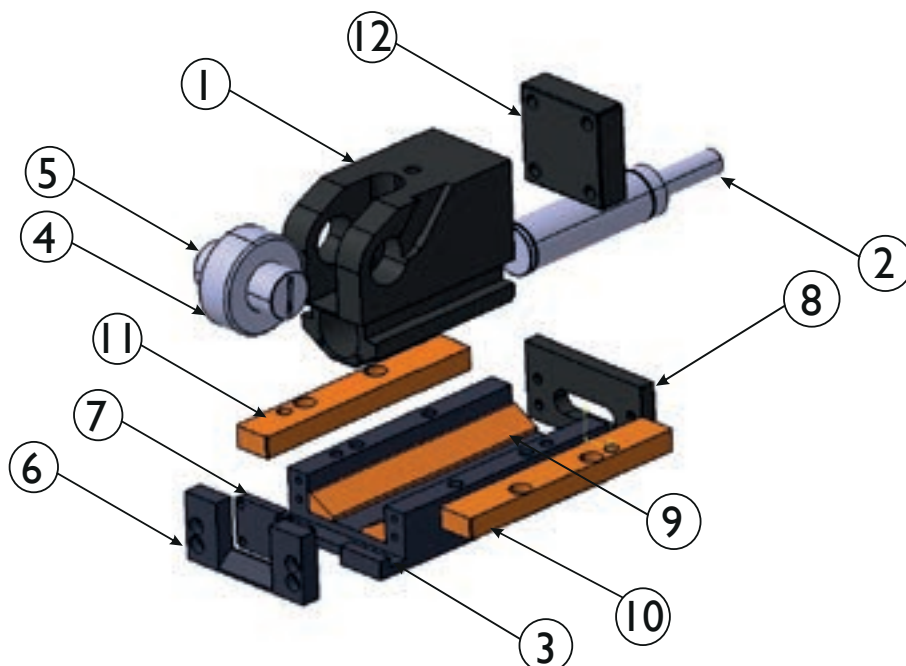

CRCN-03000

N°	Description	CRCN 03000-50	CRCN-03000-80
1	Body	CRCN-03000-50-1	CRCN-03000-80-1
2	Gas spring	G-300-50	KP-350-80
3	Cam base	CRCN-03000-50-3	CRCN-03000-80-3
4	Roller	CRCN-03000-50-4	CRCN-03000-80-4
5	Roller rod	CRCN-03000-50-5	CRCN-03000-80-5
6	Back stopper plate	CRCN-03000-50-6	CRCN-03000-80-6
7	Gas spring stopper plate	CRCN-03000-50-7	CRCN-03000-80-7
8	Front stopper plate	CRCN-03000-50-8	CRCN-03000-80-8
9	Wedge guide plate (2 pieces)	CRCN-03000-50-9	CRCN-03000-80-9
10	Right guide plate	CRCN-03000-50-10	CRCN-03000-80-10
11	Left guide plate	CRCN-03000-50-11	CRCN-03000-80-11
12	Punch holder plate	CRCN-03000-50-12	CRCN-03000-80-12

CRCN-05000

N°	Description	CRCN-05000-50	CRCN-5000-80	CRCN-05000-100
1	Body	CRCN-05000-50-1	CRCN-05000-80-1	CRCN-05000-100-1
2	Gas spring	G-300-50	KP-350-80	KP-350-100
3	Cam base	CRCN-05000-50-3	CRCN-05000-80-3	CRCN-05000-100-3
4	Roller	CRCN-05000-50-4	CRCN-05000-80-4	CRCN-05000-100-4
5	Roller rod	CRCN-05000-50-5	CRCN-05000-80-5	CRCN-05000-100-5
6	Back stopper plate	CRCN-05000-50-6	CRCN-05000-80-6	CRCN-05000-100-6
7	Gas spring stopper plate	CRCN-05000-50-7	CRCN-05000-80-7	CRCN-05000-100-7
8	Front stopper plate	CRCN-05000-50-8	CRCN-05000-80-8	CRCN-05000-100-8
9	Wedge guide plate (2 pieces)	CRCN-05000-50-9	CRCN-05000-80-9	CRCN-05000-100-9
10	Right guide plate	CRCN-05000-50-10	CRCN-05000-80-10	CRCN-05000-100-10
11	Left guide plate	CRCN-05000-50-11	CRCN-05000-80-11	CRCN-05000-100-11
12	Punch holder plate	CRCN-05000-50-12	CRCN-05000-80-12	CRCN-05000-100-12

CRCN-I5000

N°	Description	CRCN-I5000-50	CRCN-I5000-80	CRCN-I5000-100
1	Body	CRCN-I5000-50-1	CRCN-I5000-80-1	CRCN-I5000-100-1
2	Gas spring	K-570-50	KP-500-80	KP-500-100
3	Cam base	CRCN-I5000-50-3	CRCN-I5000-80-3	CRCN-I5000-100-3
4	Roller	CRCN-I5000-50-4	CRCN-I5000-80-4	CRCN-I5000-100-4
5	Roller rod	CRCN-I5000-50-5	CRCN-I5000-80-5	CRCN-I5000-100-5
6	Back stopper plate	CRCN-I5000-50-6	CRCN-I5000-80-6	CRCN-I5000-100-6
7	Gas spring stopper plate	CRCN-I5000-50-7	CRCN-I5000-80-7	CRCN-I5000-100-7
8	Front stopper plate	CRCN-I5000-50-8	CRCN-I5000-80-8	CRCN-I5000-100-8
9	Wedge guide plate (2 pieces)	CRCN-I5000-50-9	CRCN-I5000-80-9	CRCN-I5000-100-9
10	Right guide plate	CRCN-I5000-50-10	CRCN-I5000-80-10	CRCN-I5000-100-10
11	Left guide plate	CRCN-I5000-50-11	CRCN-I5000-80-11	CRCN-I5000-100-11
12	Punch holder plate	CRCN-I5000-50-12	CRCN-I5000-80-12	CRCN-I5000-100-12

Ordering example: 4 x CRCN-05000-50-3